

Resetting Your Palmtop

If your palmtop fails to respond to keystrokes or otherwise behaves unusually, you should do a **system reset** (also called **rebooting** the computer). **Do not remove the batteries.**

Caution

A system reset erases the contents of system RAM (but not the RAM disk). Therefore, any data not already saved will be lost.

You perform a system reset by pressing **CTRL**+**ALT**+**DEL** (that is, holding down **CTRL** and **ALT** and then pressing **DEL**).

If a system reset doesn't work, as a last resort you can attempt a **hard reset** by simultaneously pressing **CTRL**+**ON**+**↑** (the gold arrow). You will be asked whether or not you want to initialize the RAM disk, which erases its contents. If you type y (for yes) and press **ENTER**, a hard reset will occur *and all data is lost*; if you type n (for no) and press **ENTER**, a system reset is attempted.

Caution

A hard reset erases the contents of system RAM and the RAM disk. *All data on drive C (the RAM disk) will be lost.* Also, settings changed via the Setup Utility (for example, battery charging) will revert to their default states.